


Paddle Boat Table Assembly and Installation for the PK3000 or PK4400


Tools needed: Phillips head screwdriver, drill with an 11/32" drill bit and a 1/2" wrench
Screws included: 12) 3/4" self-drilling screws 4) 1/4" bolts, washers, and wing nuts

Note: Do not over tighten screws!

1. Using a Phillips head screwdriver, install the 3/4" screws in numeric order (all attachment points are pre-drilled and pre-numbered).

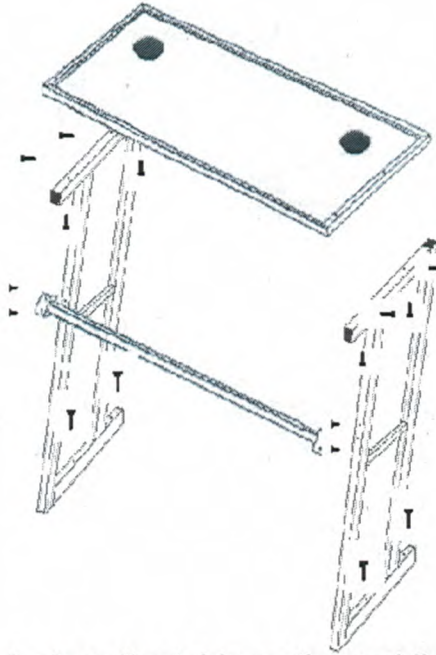

2. Once the table is assembled, place the table on the paddle boat by lining up the edge of the front table legs with the front edge of the boat (see pic below).
3. Locate the 4 predrilled mounting holes. Mark the paddle boat deck and remove the table. Using an 11/32" drill bit, drill all 4 holes through the deck and frame of the boat.
4. Set the table back in place and install the 4 1/4" bolts until tight.
5. Set table back in place and install the 4 1/4" bolts until tight.

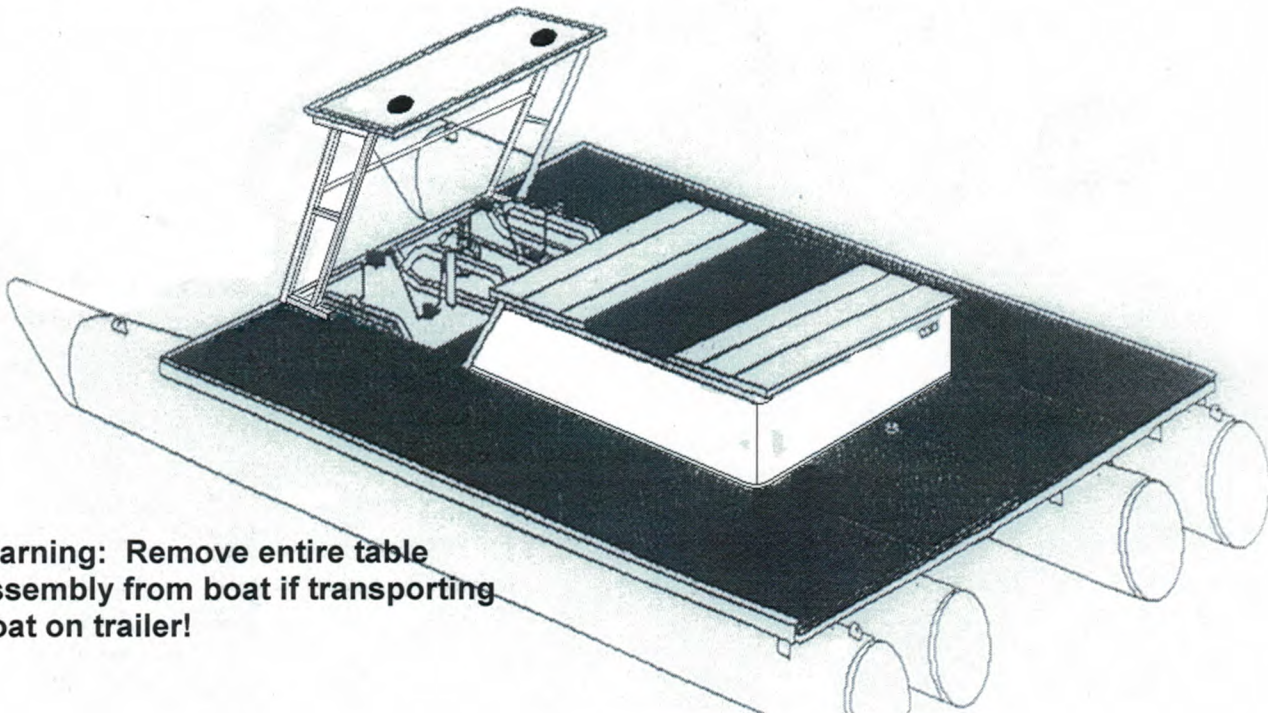

Warning: Remove entire table assembly from boat if transporting boat on trailer!